

ISSUE

My Tap Head continually pops off top of bottle.

Your Wine Saver PRO® has been designed to seal properly on all standard wine bottles. Some custom made or unusually shaped bottles may not seal properly against the Tap Head causing it to pop off continually.

Also note that drastic drops or increases in atmospheric pressure could cause this issue. Because of this the Wine Saver PRO is not approved for use in an aircraft.

1. Ensure Bottle Seal Fins are not torn or damaged.
2. Return Bottle Seal Fins to original shape by running under hot water and re-insert Tap Head into bottle.
3. Ensure Rubber Bottle Seal is clean and has not been damaged.
4. Regulator Unit may be malfunctioning and requires replacement.
(Call customer service for additional support.)

